# **■** Specification

Model	Dis-166H	
Pick up Element	1/3" SONY Super HAD CCDII	
Effective Picture Elements (H×V)	NTSC:768(H)×494(V) PAL:752(H)x582(V)	
Horizontal Resolution	600 TV Line	
Minimum Illumination	0.001 Lux	
Milling indimination	0Lux (with IR LED ON)	
S/N Ratio	More than 50dB	
Scanning System	2:1 interface	
Synchronous System	Internal, Negative sync.	
Auto Electronic Shutter	NTSC: 1/60s~1/100,000s, PAL: 1/50s~1/100,000s	
Gama Characteristic	0.45	
IR Distance	30 Meters (with ⊄ 5X36 PCS Infrared LED)	
Video Output	1Vpp, 75Ω	
Auto Gain Control	Auto	
Power/Current	DC12V(+/-10%)/450mA	
Lens	Board Lens 6mm /F2.0	
Dimension (mm)	228 (W) x97(H) x82(D)	
Weight (g)	880	
Storage Temperature	-30~+60℃ RH95% MAX	
Operating Temperature	-10~+45℃ RH95% MAX	

## ■ Packing List

No	Name	Model	Number
1.	Weatherproof IR Color Camera	Dis-166H	1
2.	User Guide	Dis-166H	1

Franchiser:

## **Dis-166H Color Camera**

### **Weatherproof IR Color Camera**



**Notes:** Before providing power for the camera, please read this User Guide in detail!

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.

#### ■ BRIEF OF PRODUCT

#### \* Sensor (CCD)

Adopt SONY 1/3" CCD Sensor.

#### \* Auto Gain Control (AGC)

Built-in auto gain control **(AGC)** circuit. The color camera can get high definition picture in low Lux condition.

### \* Scanning Mode

NTSC or PAL mode.


\* Water Resistance

#### \* OSD SETTING

IP66.

	LENS	MANUAL/DC/VIDEO		
		SHUTTER	AUTO,FLK,1/50,1/250,1/500,1/2000,1/40000, 1/5000,1/10000,1/100000	
	EXPOSURE	BRIGHTNESS	0-255	
	EXPOSURE	AGC	LOW/MIDDLE/HIGH/OFF	
		D-WDR	OFF/ON(LEVEL:0-63)	
		RETURN		
	WHITE BAL	ATW1/ATW2/AWC-SET/MANUAL:(INDOOR、OUTDOOR、MANUAL)		
	BACK LIGHT	OFF		
		BLC:AREA SEL/AREA STATE/GAIN/HEIGHT/LEFT/RIGHT/ TOP/BOTTOM		
		HLC:LEVEL(0-255)/ MODE(ALL DAY/NIGHT ONLY)		
	DPC	COVER THE LENS THEN PRESS ENTER KRY		
		COLOR		
	DAY & NIGHT	B/W	BURST(OFF/ON)/IR SMART(OFF/ON:IR GAIN/ HEIGHT/WIDTH/LEFT/RIGHT/TOP/ BOTTOM)/IR LEVEL(HIGH/LOW)	
		AUTO	D-N(LEVEL/DELAY) /N-D(LEVEL/DELAY)	
OSD	SPECIAL	CAM TITLE	ON/OFF	
SET		MOTION OFF/ON PRIVACY OFF/ON	AREA SEL:AREA1-4	
			AREA STATE:OFF/ON	
			HEIGHT/WIDTH/LEFT/RIGHT/TOP/BOTTOM /	
			DEGREE/VIEW	
			AREA SEL:AREA1-8 AREA STATE:OFF/ON	
			HEIGHT/WIDTH/LEFT/RIGHT/TOP/BOTTOM /	
			COLOR	
		PARK.LINE	OFF/ON(LT/LB/RT/RB/F/N/T)	
		IMAGE ADJ	LENS SHAD:OFF/ON	
			2DNR:OFF/ON	
			MIRROR:OFF/ON	
			FONT COLOR:FONT(0-15)/ID&TITLE(0-15)	
			CONTRAST:0-255 SHARPNESS:0-31	
			NEG.IMAGE:OFF/ON	
			DISPLAY:CRT(PED LEVEL:0-63/COLOR GAIN:0- 255)/LCD(GAMMA:0-1/PED LEVEL:0-63/ COLOR:0-255)/USER(GAMMA:0-1/PED LEVEL:0- 63/COLOR:0-255)	
	RESET		FACTORY RESET	
	EXIT		,	
		I		

#### ■ CONNECTING

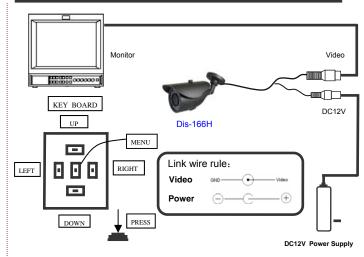

#### TROUBLE AND SOLUTION

#### 1. No Picture after providing power

- . May be the power supply voltage abnormity, please check the power supply voltage and pole whether exactitude.
- . Please check all the connecting cable and monitors whether be connected correctly or not.

#### 2. The picture level direction have flowing interference ripples

- . May be caused by the power supply AC ripples, it need filter the wave of the power supply.
- . Check the monitor and peripheral equipments used.

#### 3. The picture background color changes continuously

- . The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras.
- . Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it.
- . Use power supply external sync. camera can solve it.

#### 4. The picture smear too mass

- . The power supply's voltage unstable.
- . Connecting cables not connect correctly or have high impedance.



- The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.
- •When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable.
- In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.

#### ■ INTRODUCTION

Congratulations on your purchase of this product. This User Guide suits Dis-166H product. We adopt the latest SONY technical of sensor and driver. The most attractive characteristics are small and easy hidden, suits the elevator and corridor. In addition, it owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to your CCTV system.

Please read this instruction manual carefully to ensure proper use of the product.



The symbol is intended to alert the user to the presence of important operating and maintenance (servicing)
Instructions in the literature accompanying the appliance.



The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constitute a risk of electric shock to persons.



# CAUTION: RISK OF ELECTRIC, DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC

SHOCK

DO NOT REMOVE COVER OR BACK NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING

CAUTION: TO PREVENT ELECTRIC SHOCKS AND RISK OF FIRE HAZARDS, DO NOT USE OTHER THAN SPECIFIED POWER SOURCE.



#### Note:

- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is -30~+60°C.
   (Recommendatory operating temperature is -10~+45°C.)
- Never make the camera face the sun or bright object. Otherwise, it will damage the CCD.
- Do not mount the camera near by the radiator or heater.